





HIE TAKARI®




8/25 6HRLM

S47

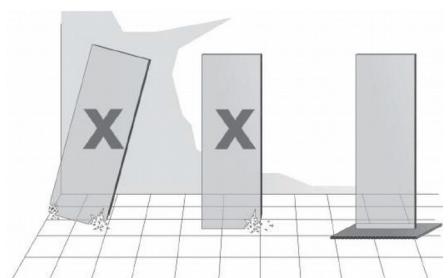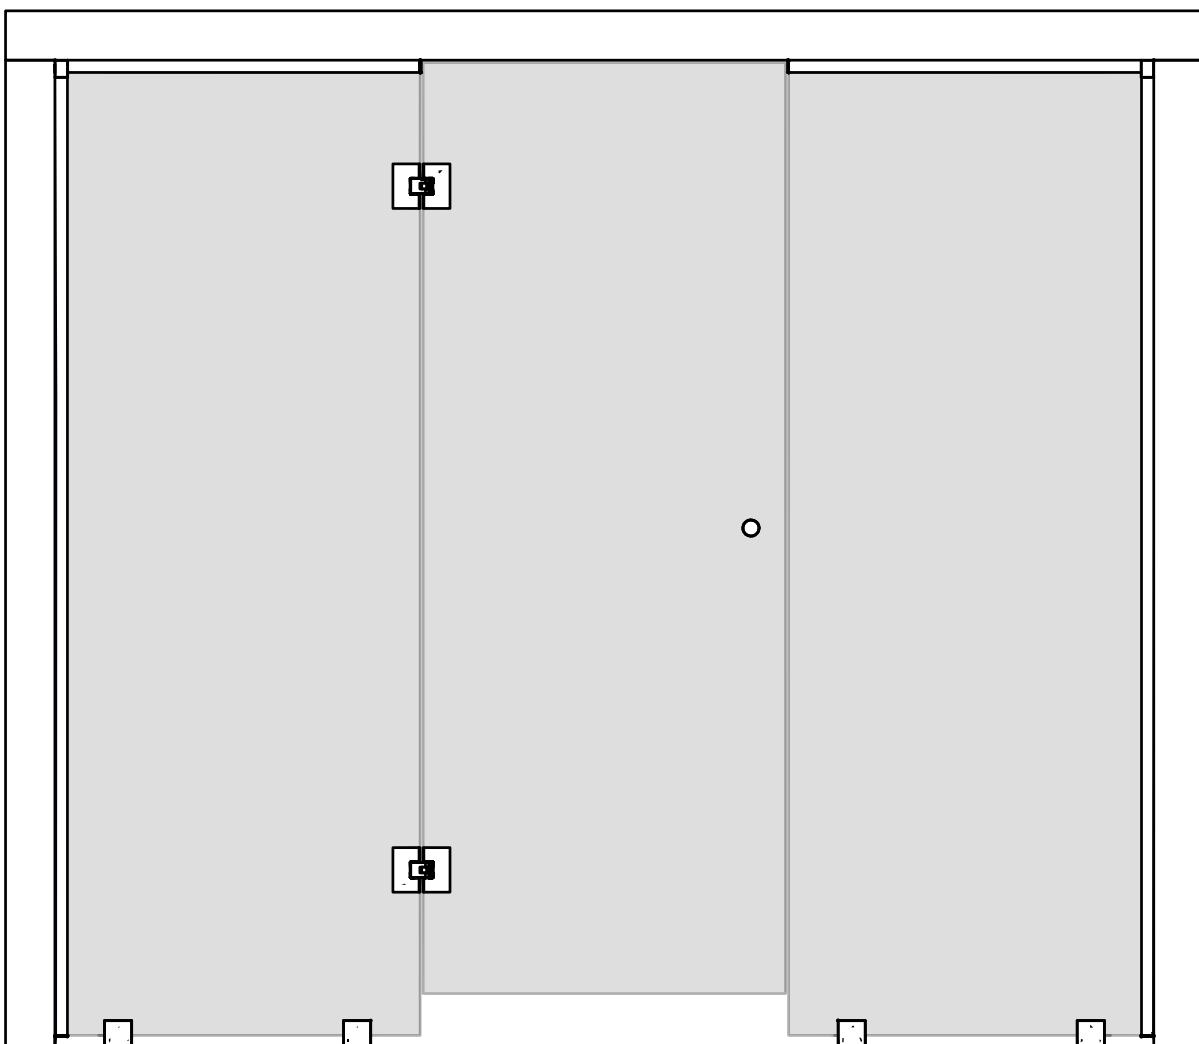


Parts

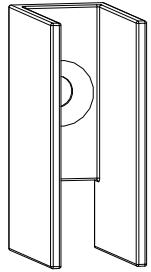


1. x2



2. x2

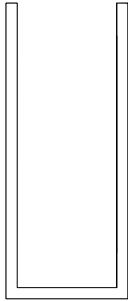


3. x4

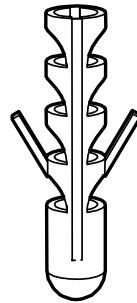

4/83 31RLM



4/83 14RLM

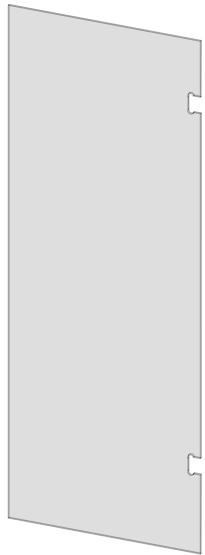


6. x1



7. x1




8. x1

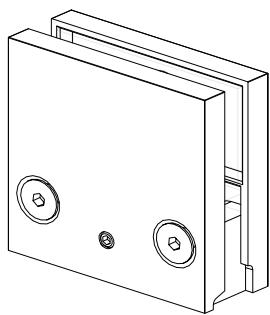


9. x4

8/65 242LM

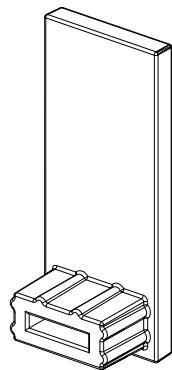


10. x4

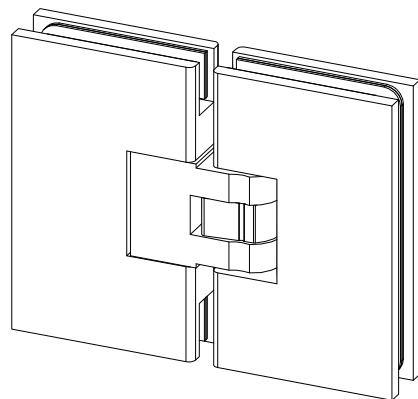

11. x2

Tools

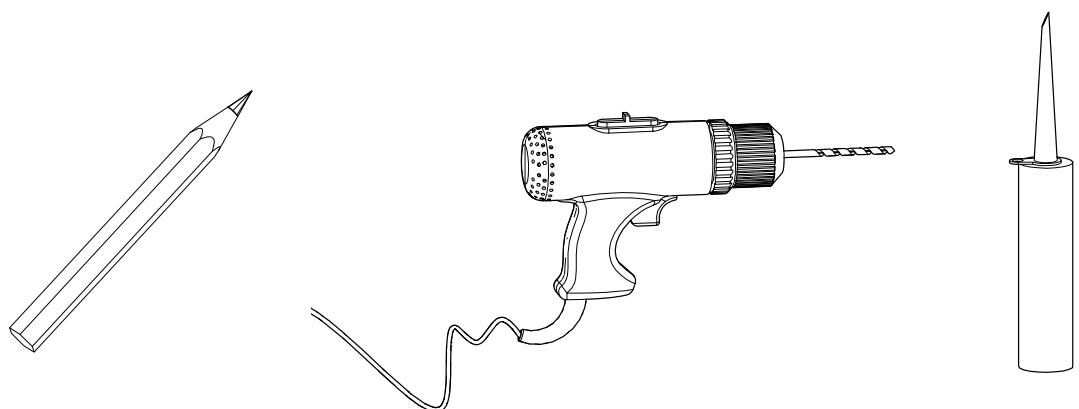

A

$\varnothing 4$ mm


$\varnothing 5$ mm

B


C – Silicone




E

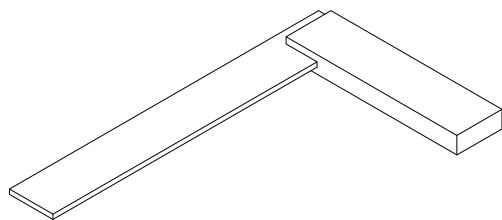




F

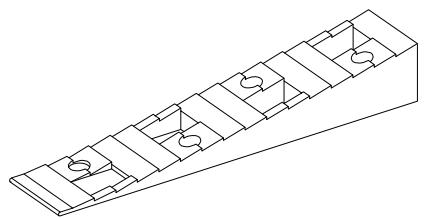


G

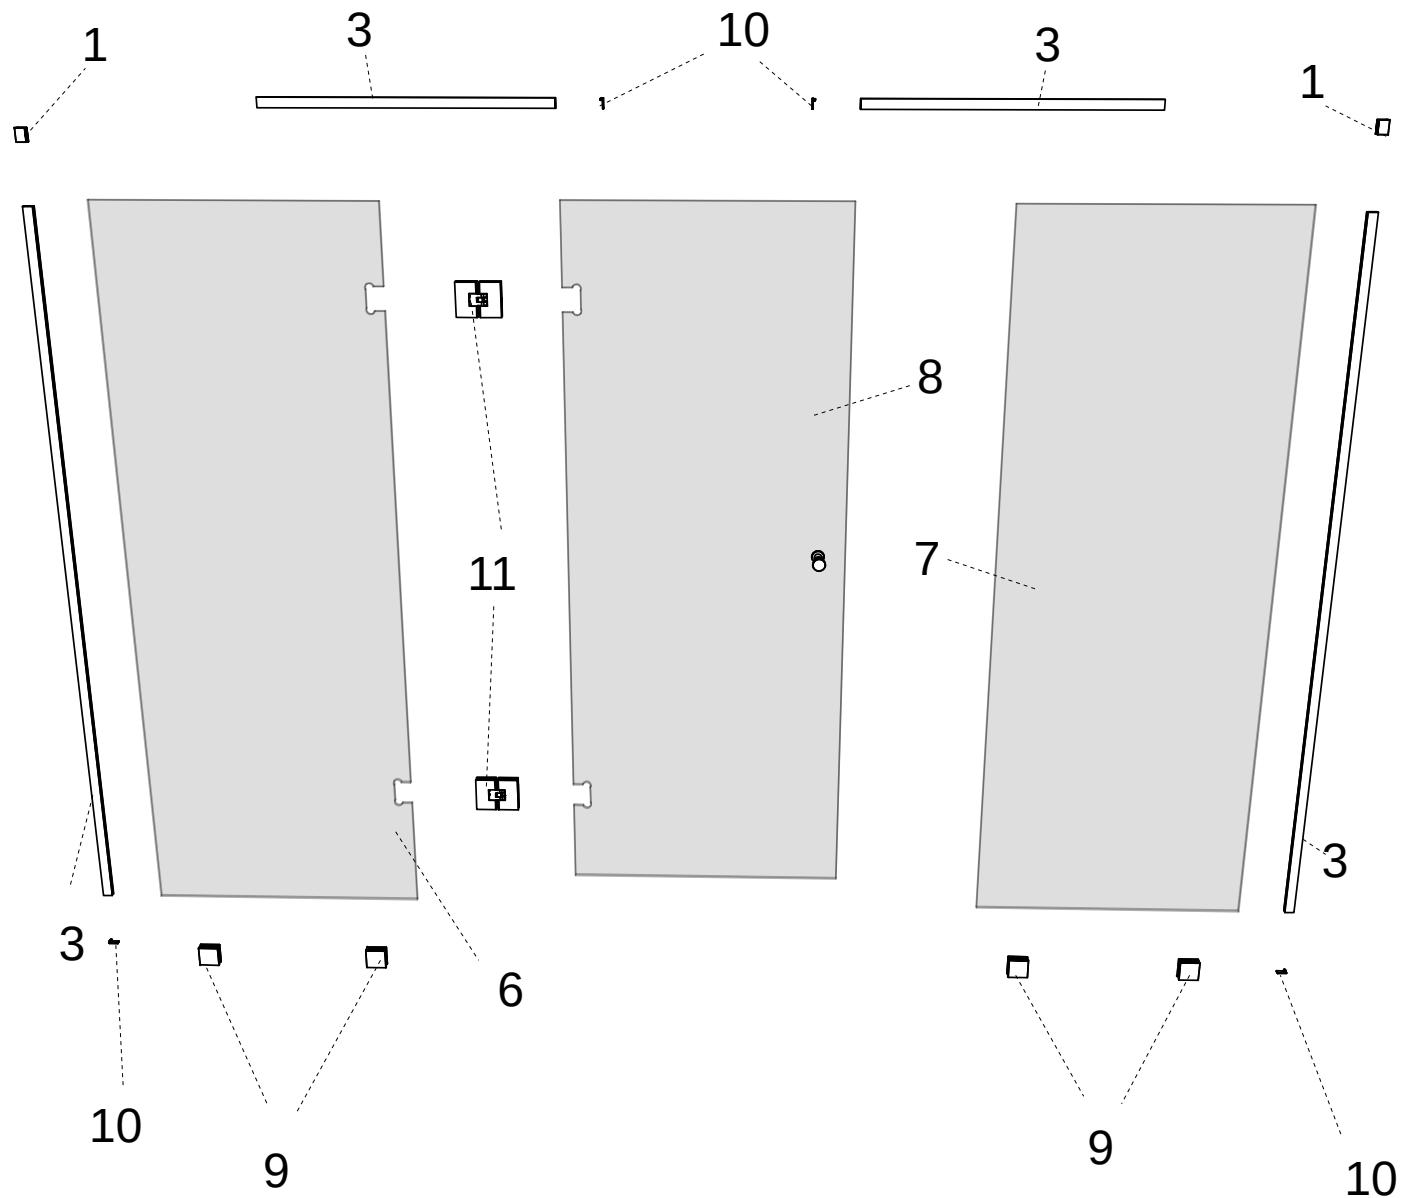


1

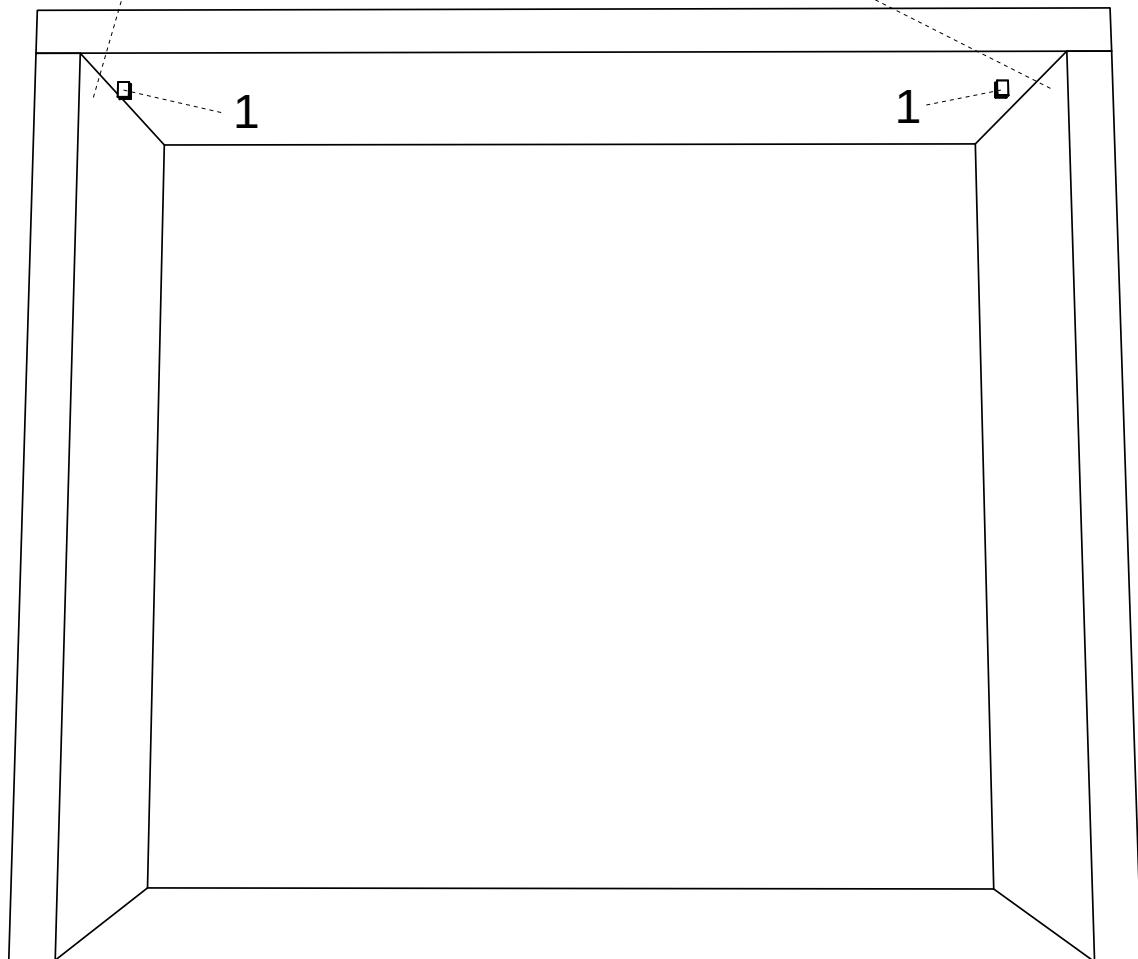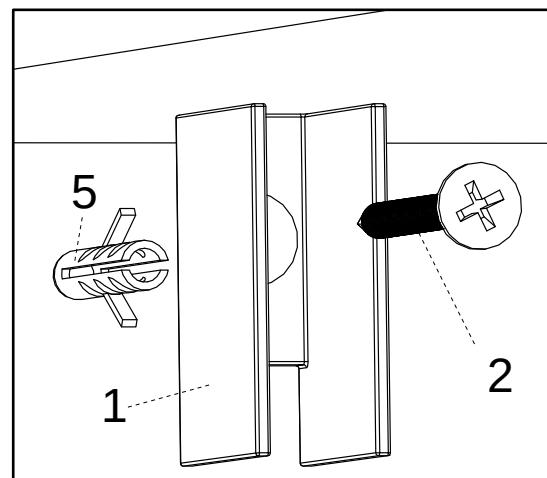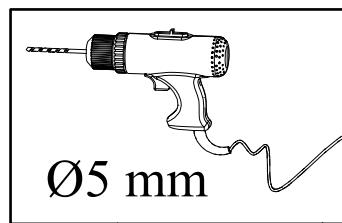

2

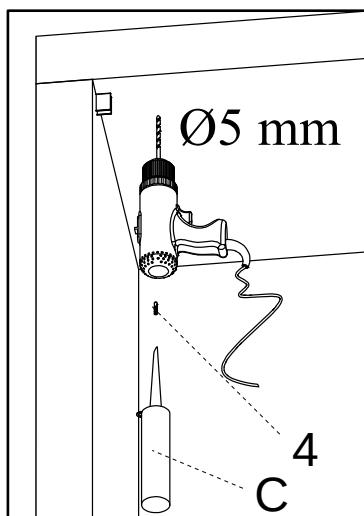


$\varnothing 4 \text{ mm}$

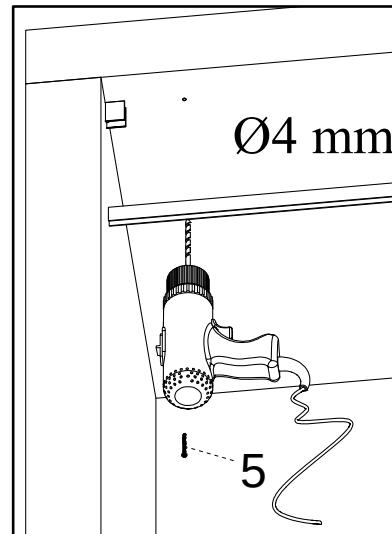

3

3


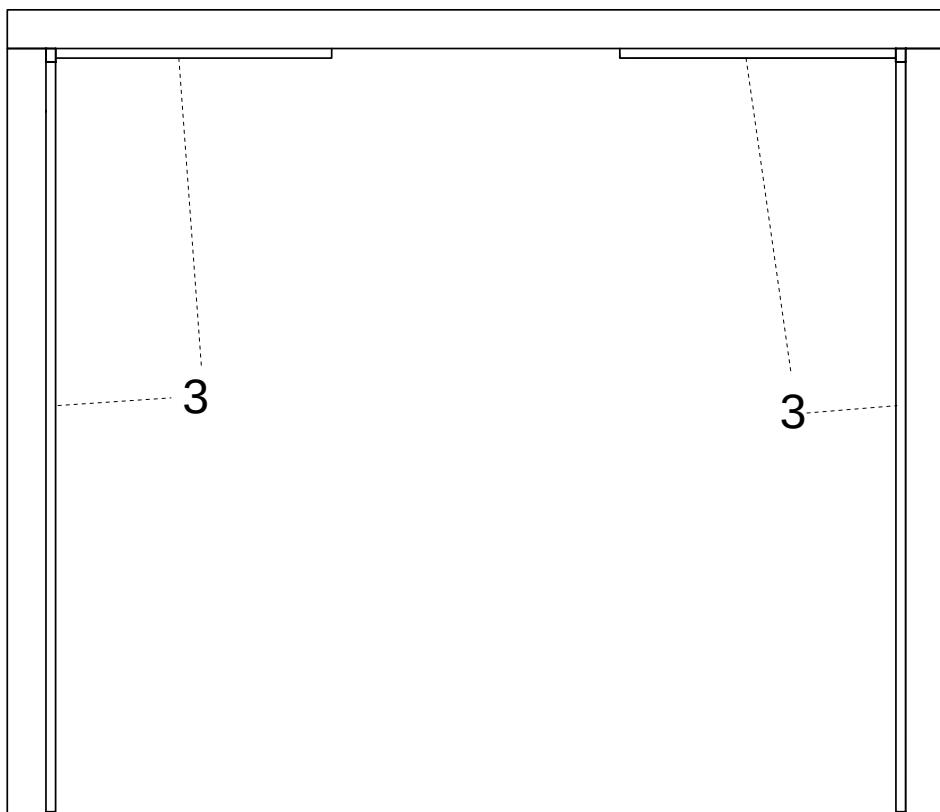


$\varnothing 5 \text{ mm}$




4

$\varnothing 4 \text{ mm}$


5

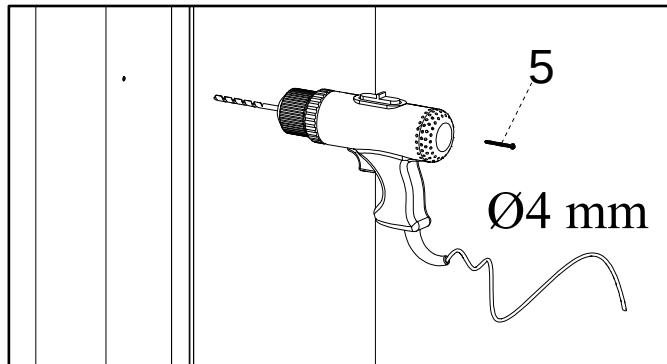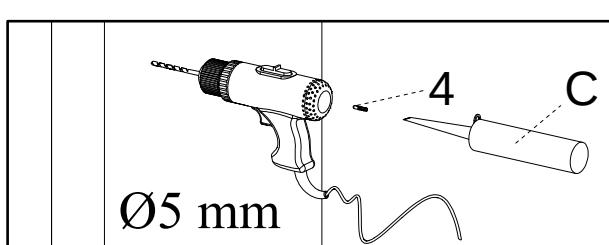

3

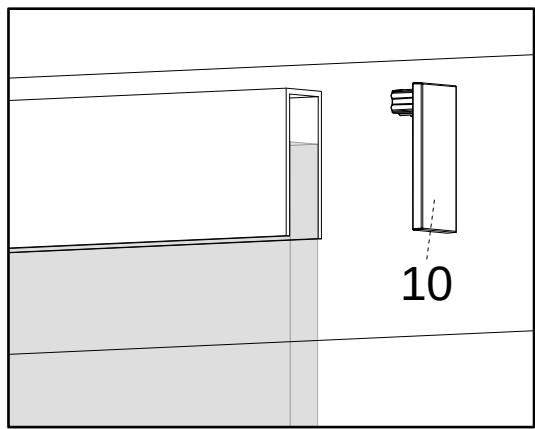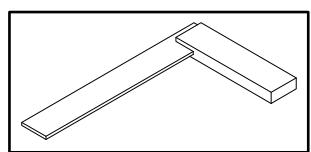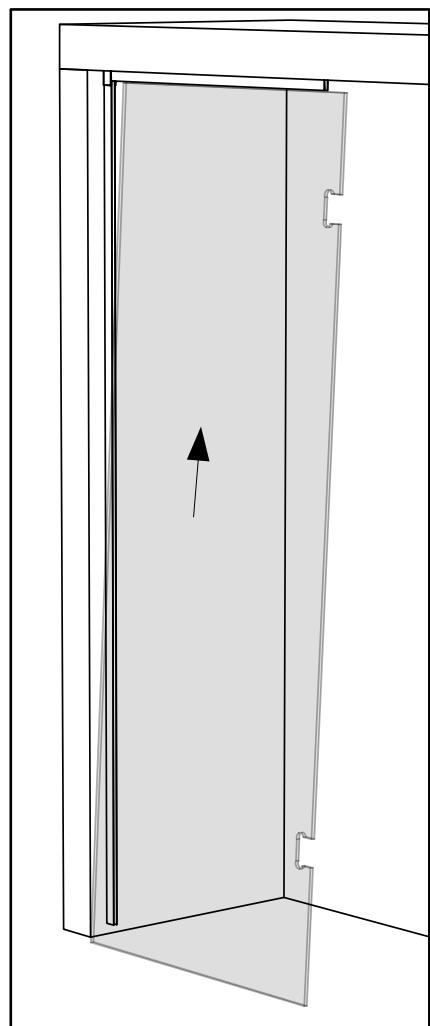


10




7

6

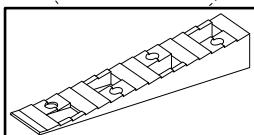


10 9

9 10


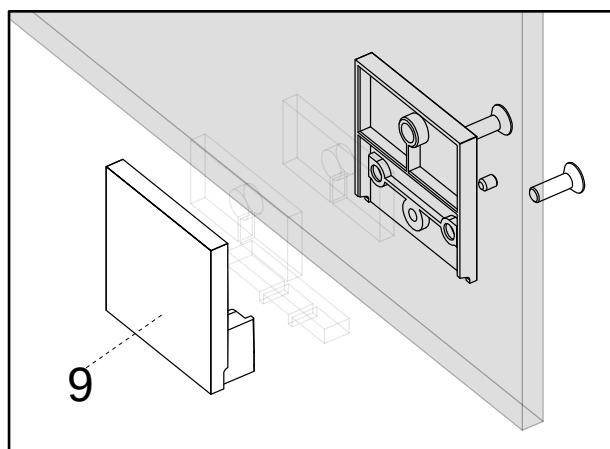


9

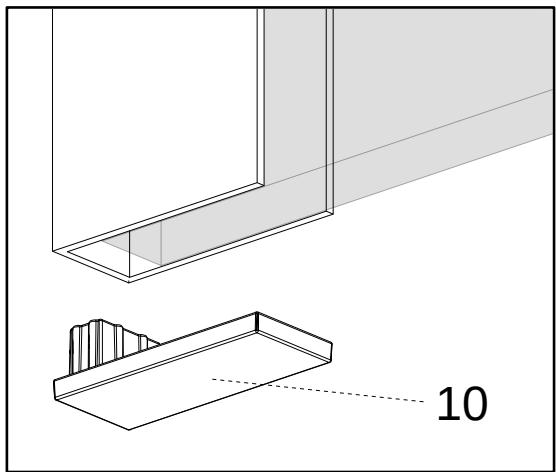

10

4

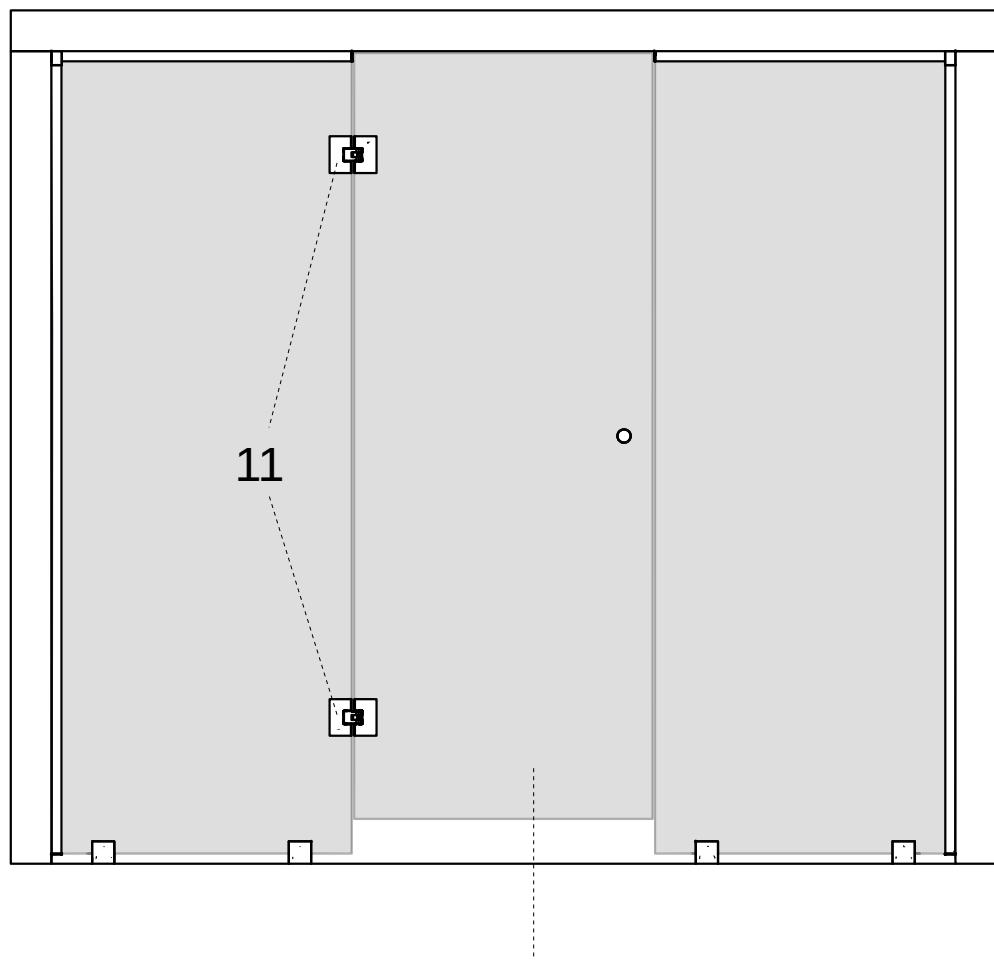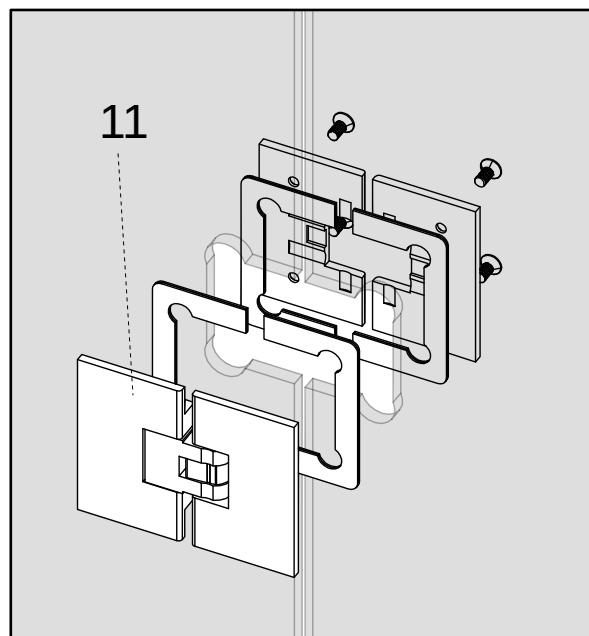

8

